pixiimodo
RELIVE THE MOMENTS

Reflection 15
15" DIGITAL PICTURE FRAME

USER MANUAL

www.piximodo.com

pixiimodo
RELIVE THE MOMENTS

Reflection 15
15" DIGITAL PICTURE FRAME

USER MANUAL
www.piximodo.com

Table of Contents

Introduction 3
Main Features 3
Getting Started 4
Package Contents 4
Installing your unit 4
Connecting to a PC 4
Controls 5
Using your Remote Control 5
Inserting Memory Cards 6
Main menu 6
Viewing Pictures 7
Changing the orientation for one picture 8
Zoom 8
Browsing Thumbnails 9
Watching video 9
Listening to MP3 music 10
Playing a slideshow with music 10
Viewing Text 11
Using the EDIT option 11
Copying and Deleting Files 11
Using the SETUP option 12
Language setup 12
Clock Set option 13
Alarm Set Option 14
Changing the slideshow speed 14
Video setup 15
Technical Support 16
Frequently asked questions 16
Your warranty 18
Specifications 18
Maintenance and Precaution 19
Cleaning the LCD screen 20
Regulatory Compliance 20
CE Declaration of Conformity 22
Federal Communications Commission (FCC) Notice (U.S. and Canada Only) 22
Commission Fédérale de la Communication (FCC Déclaration) 22
End-of-Life Disposal 23
Service and Warranty 23

Introduction

Congratulations on your purchase of Longshow Digital Picture Frame. Model No.: DPF1500AGN.
Before operating the unit, please read this manual thoroughly, and retain it for future reference. This manual will help you use many of the exciting and useful features that will make your Digital Picture Frame viewing more enjoyable.

This Digital Picture Frame lets you view digital pictures directly from your camera's memory cards or the internal memory. You will be able to create a slideshow using multiple transition effects or display one picture at a time. No computer, digital camera or Internet connection is required.

This Digital Picture Frame is compatible with the following popular memory card formats: CompactFlash®, SD™, XD, MultiMediaCard™, and Memory Stick®.

It can also read files stored on a USB Flash drive using the USB host port.

Main Features

Displays digital pictures (JPEG) without a computer
Simply insert a compatible memory card into the Digital Picture Frame to show photos, play MP3 music or supported video files
Compatible memory cards include Secure Digital Card (SD), , Multimedia Card (MMC), Memory Stick (MS), XD Cards & Compact Flash
Able to read files located on a USB Flash drive
Instantly plays MP3 music with the integrated speakers.
Instantly plays MPEG1, Motion JPEG /DIVX/ XVID/ MS MPEG4 AVI files stored on supported memory cards*.
Supports up to 12 Mega Pixels image file. (JPEG format).
Compatible with most digital cameras' stored JPEG images and motion JPEG files.
Includes a credit card style remote control
Bright TFT active matrix LCD screen.
Automatic slide show with multiple transition effects.
Plays slide show with MP3 music on the background.
User-friendly on-screen display lets you access all controls easily.
*Video files may not play properly if stored on a low speed card.

Table of Contents

Introduction 3
Main Features 3
Getting Started 4
Package Contents 4
Installing your unit 4
Connecting to a PC 4
Operation 4
Controls 6
Using your Remote Control 6
Inserting Memory Cards 7
Main menu 7
Viewing Pictures 8
Watching video 10
Listening to MP3 music 13
File Management 14
Playing a slideshow with music 14
Copying and Deleting Files 15
Using the SETUP option 17
Technical Support 18
Frequently asked questions 18
Specifications 21
Maintenance and Precaution 22
Cleaning the LCD screen 22

Introduction

Congratulations on your purchase of Digital Picture Frame.

Before operating the unit, please read this manual thoroughly, and retain it for future reference. This manual will help you use many of the exciting and useful features that will make your Digital Picture Frame viewing more enjoyable.

This Digital Picture Frame lets you view digital pictures directly from your camera's memory cards. You will be able to create a slideshow using multiple transition effects or display one picture at a time. No computer, digital camera or Internet connection is required.

This Digital Picture Frame is compatible with the following popular memory card formats: CompactFlash®, SD™, XD, MultiMediaCard™, and Memory Stick®.

It can also read files stored on a USB Flash drive using the USB host port.

Main Features

- Displays digital pictures (JPEG) without a computer
- Internal Memory option
- Simply insert a compatible memory card into the Digital Picture Frame to show photos, play MP3 music or supported video files
- Compatible memory cards include Secure Digital Card (SD), MultiMedia Card (MMC), Memory Stick (MS), XD Cards & Compact Flash
- Able to read files located on a USB Flash drive
- Instantly plays MP3 music with the integrated speakers.
- Instantly plays MPEG1 files stored on supported memory cards*.
- Instantly plays MPEG2 files stored on supported memory cards*.
- Instantly plays MPEG4 files stores on supported memory cards.
- Supports up to 12 Mega Pixels image files (JPEG format).
- Compatible with most digital cameras' stored JPEG images and motion JPEG files.
- Includes a credit card style remote control
- Automatic slide show with multiple transition effects.
- Plays slide show with MP3 music on the background.
- User-friendly on-screen display lets you access all controls easily.
- Interchangeable Frames

Getting Started

Package Contents

Digital Picture Frame and stand

User Guide

AC/DC Adapter

Remote Control

USB Cable

Installing your unit

Open the package and remove the protective foam. Remove the protective sleeve from the unit.
Install the Digital Picture Frame stand as the back of the unit.
Plug in the AC adapter into power outlet. Plug the other end into the unit.
After the content is stored on the target flash media; insert the media into the correct slot.
Turn power to ON position via the ON/OFF switch.

Connecting to a PC

The Digital Picture Frame has a USB port for connection to a PC (USB Slave) and a second USB port for connection to other devices such as a Flash Drive, USB card reader, or a camera (USB Host).

Controls

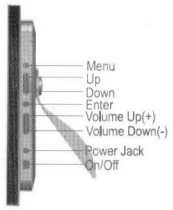

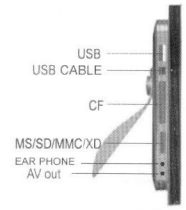

Using your Remote Control

The following table briefly describes the remote control functions

Button	Description
Power	Turn on/off/AV Out
Photo	Access your photo files
Music	Access your music files
Video	Access your videos files
Combo	Start the slideshow
Time	Display the time/ Calendar
Mute	Mutes volume
Menu	Displays the main menu
Enter	Select highlighted item
VOL +/-	Adjusts volume
Arrows	Navigate on screen
▶/II	Play/ pause

The battery life will not be longer than 6 months since DPF production.

DIGITAL PICTURE FRAME

*Video files may not play properly if stored on a low speed card.

Getting Started

Package Contents

User Manual

Digital Picture Frame

Remote control

AC/DC Adapter

USB Cable

Installing your unit

- Open the package and remove the protective foam. Remove the protective sleeve from the unit.
- Install the Digital Picture Frame stand as the back of the unit.
- Plug in the AC adapter into power outlet. Plug the other end into the unit.
- After the content is stored on the target flash media; insert the media into the correct slot.
- Turn power to ON position via the ON/OFF switch.

Connecting to a PC

The Digital Picture Frame has a USB port for connection to a PC (USB Slave) and a second USB port for connection to other devices such as a Flash Drive, USB card reader, or a camera (USB Host). When connected to the PC you can drag-and-drop content from the PC to the internal memory or memory card. You can also delete content from the internal memory.

NOTE: USB Slave and USB Host can not be used at the same time.

Operation

This Digital Frame is extremely easy to operate:

1. Remove memory card from camera:

DIGITAL PICTURE FRAME

2. Insert memory card into the frame with face away from the unit:

3. The slideshow will start automatically:

Inserting Memory Cards

The Digital Picture Frame is compatible with the following memory cards:
Secure Digital™ Card (SD)
MultiMedia™ Card (MMC)
Memory Stick™
CompactFlashTM (CF) Card
XD Picture Cards
Insert the memory card with the front label facing AWAY from you. Do not force the memory card into the memory slot. If you are not able to easily insert the memory card completely, you may have inserted it the wrong way.
Note:
The Digital Picture Frame will ONLY recognize digital pictures stored in JPEG format. Digital pictures stored in other formats will be ignored by the device.
Make sure you have at least one picture stored on the memory card. The frame will not function properly without a stored picture.
You also can use a USB flash drive in the exact same way as you would use a memory card. Simply copy files on the flash drive and insert it at the right side of the unit in the USB Host plug.

Main menu

Upon turning on the Digital Picture Frame, the slideshow will automatically start. Press the "MENU" button to show the following menu:

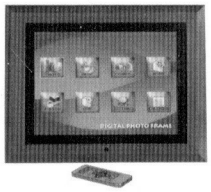

This screen will allow you choose the type of media to play.
Use the left and right arrows to move inside the menu and then press "Enter" to continue

Note: In all menus, pressing the "Menu" button will bring you back to the main menu

Function	Description
Picture	Play photos in slideshow
Music	Play MP3 audio
Combo	Play slideshow with audio
Movie	Play movies
Text	Play text data on the display
Edit	Copy/Delete, Brightness, Contrast, Saturation
Setup	Set System Menu

Viewing Pictures

Make sure you have at least one picture on your memory card/ USB flash drive or internal memory. When this is done:
Highlight the "PHOTO" option from the main menu and press "ENTER"
Select the desired flash media. (SD/xD/CF/MS/USB/ Internal Memory)

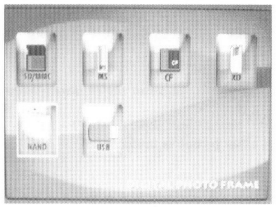

A list of available pictures will be displayed. Use the up and down arrows to highlight the desired file and press "Enter" to continue

DIGITAL PICTURE FRAME

Controls

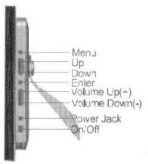

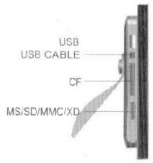

Using your Remote Control

The following table briefly describes the remote control functions

Button	Description
Power	Turn on/off
Photo	Access your photo files
Music	Access your music files
Video	Access your videos files
Combo	Start the slideshow
Time	Display the time/ Calendar
Mute	Mutes volume
Menu	Displays the main menu
Enter	Select highlighted item
VOL +/-	Adjusts volume
Arrows	Navigate on screen
▶/II	Play/ pause

DIGITAL PICTURE FRAME

Inserting Memory Cards

The Digital Picture Frame is compatible with the following memory cards:

- Secure Digital™ Card (SD)
- MultiMedia™ Card (MMC)
- Memory Stick™
- CompactFlash™ (CF) Card
- XD Picture Cards

Insert the memory card with the front label facing AWAY from you. Do not force the memory card into the memory slot. If you are not able to easily insert the memory card completely, you may have inserted it the wrong way.

Note:

The Digital Picture Frame will ONLY recognize digital pictures stored in JPEG format. Digital pictures stored in other formats will be ignored by the device.

Make sure you have at least one picture stored on the memory card. The frame will not function properly without a stored picture.

You also can use a USB flash drive in the exact same way as you would use a memory card. Simply copy files on the flash drive and insert it at the right side of the unit in the USB Host plug.

Main menu

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. To set the Auto Start feature Choose the SETUP screen. Use the left/right arrow to go to the "Set up". Press Enter button to enter the options screen. Use the Up / down arrows to choose your auto start option. Press the "MENU" button to show the following menu:

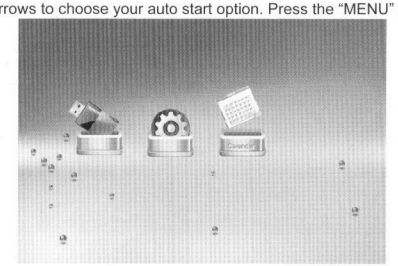

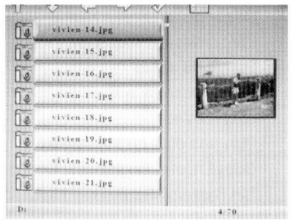

The slideshow will start
Once a slideshow is playing or a picture is being shown, press the ENTER button. (In a slideshow, using the remote control press "ENTER" twice to pause then change settings on a specific picture). The following menu will appear:

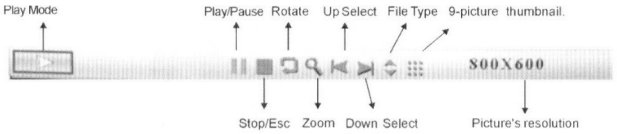

Changing the orientation for one picture

Use the rotate function to change the picture orientation to either portrait or landscape.

Zoom

Choose the Zoom function to magnify the image. Repeat this operation several times to further zoom in.

Browsing Thumbnails

Choose the thumbnail option on the menu (the icon with 9 bullets points) and you will be able to browse though your pictures in thumbnail format.

Watching video

The Digital Picture Frame supports the following video formats:
Motion JPEG (AVI): video format used by most digital cameras
MPEG1, DIVX/XVID/ MPEG4 (AVI)
Make sure you have at least one video on your memory card or your USB flash drive. When this is done:
Choose the "MOVIE" option from the main menu and press "ENTER"
Select the desired flash media. (SD/xD/CF/MS/USB/Internal Memory)
A list of available videos will be displayed. Use the up and down arrows to highlight your required file and press "Enter" to continue

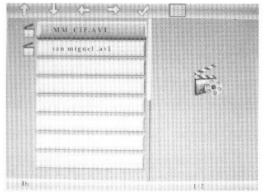

The video will begin playing
Once a movie is playing, press the ENTER button on the remote control. The following menu will appear:

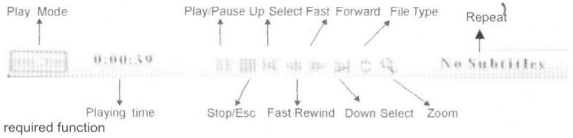

Use the arrow buttons to select the required function

DIGITAL PICTURE FRAME

Use the left and right arrows to move inside the menu and then press "Enter" to continue

Note: In all menus, pressing the "Menu" button will bring you back to the main menu

Function	Description
Nand	Play files in internal memory
Setup	Set system menu
Calendar	Display calendar, clock, alarm
SD/MMC/MS/xD	Play files on SD/MMC/MS/xD memory card
CF	Play files on CF memory card
USB	Play files on USB flash drive

NOTE: Icons of above functions shall appear automatically on MENU screen when certain memory card is inserted. Icons shall disappear when correspondent card is removed from card slot.

Viewing Pictures

Make sure you have at least one picture on your memory card or your USB flash drive. When this is done:

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "PHOTO" option from the menu and press "ENTER"

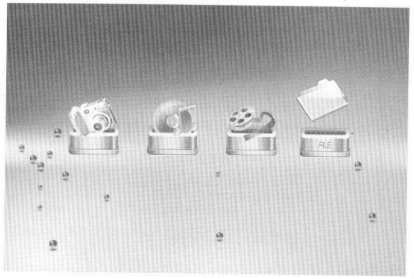

DIGITAL PICTURE FRAME

- A Photo thumbnail will appear. User UP/DOWN/LEFT/RIGHT arrows can move the highlight. If the highlighted is a folder, press Enter to enter the folder.

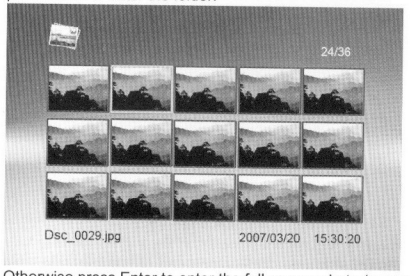

- Otherwise press Enter to enter the full screen photo (pause mode) and press Play to enter into slideshow mode.
- Once a slideshow is playing or a picture is being shown, press the OSD button. The following menu will appear:

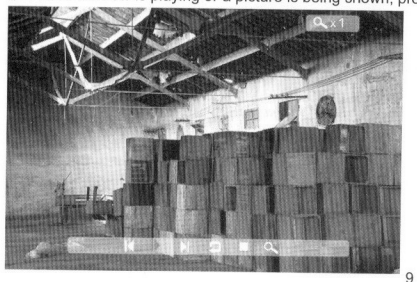

Listening to MP3 music

Make sure you have at least one MP3 file on your memory card/USB flash drive or internal memory. When this is done:
Choose the "MUSIC" option from the main menu and press "ENTER"
Select the desired flash media. (SD/xD/CF/MS/USB/Internal Memory)
A list of available songs will be displayed. Use the up and down arrows to highlight your required file and press "Enter" to continue

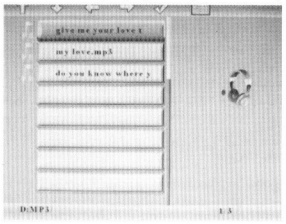

The song will be played
Once a song is playing, press the ENTER button on the remote control. The following menu will appear:



Use the arrow buttons to select the required function

Playing a slideshow with music

Ensure you have at least one picture on your memory card/USB flash drive or internal memory. Additionally, you must have one MP3 file saved on the selected memory card/USB/Internal Memory. When this is done:
Choose the "COMBO" option from the main menu.
Select the desired flash media. (SD/xD/CF/MS/USB/Internal Memory)
A list of available pictures will be displayed. Use the up and down arrows to highlight your required file and press "Enter" to continue

The slideshow will start while playing the first available song on the media
Once audio-slideshow has started, press the ENTER button on the remote control. The following menu will appear:



Use the arrow buttons to select the required function
Note: Please make sure that there has at least one MP3 file in your card when you play this function!

Viewing Text

Make sure you have at least a text file in ASCII format on your memory card or your USB flash drive. When this is done:
Choose the "TEXT" option from the main menu.
Select the desired flash media. (SD/xD/CF/MS/USB/ Internal Memory)
A list of available text files will be displayed. Use the up and down arrows to highlight your required file and press "Enter" to continue
The text will be displayed
The up and down arrows can be used to scroll through the on screen text.

AV Out:

Press the "POWER" button at the main menu after connected with other displayer, it will display on other monitors.

Caution: Please do not insert USB when the digital photo frames connecting computer! ***Using the EDIT option***

With the EDIT function you can Copy/Delete files as well as control the Color Setup.

Copying and Deleting Files

To copy and delete files on your memory card/ USB drive or internal memory:
Copy:
Choose the "EDIT" option from the main menu.
Select the desired flash media that you want to copy from. (SD/xD/CF/MS/USB/ NAND Internal Memory)

DIGITAL PICTURE FRAME

Previous
Play previous picture in the picture list

Play or Pause

Play or pause the current slideshow.

Next
Play next picture in the picture list

Rotate
Use the rotate function to change the picture orientation to either portrait or landscape.

Stop
Stop slideshow and return to photo thumbnail.

Zoom
Increase the size of the picture by 2/4/8/16/1 times.

Watching video

The Digital Picture Frame supports the following video formats:

- Motion JPEG (.avi): video format used by most digital cameras
  MPEG-I
- MPEG-2
- MPEG 4

Make sure you have at least one video on your memory card or your USB flash drive. When this is done:

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "MOVIE" option from the menu and press "ENTER"

DIGITAL PICTURE FRAME

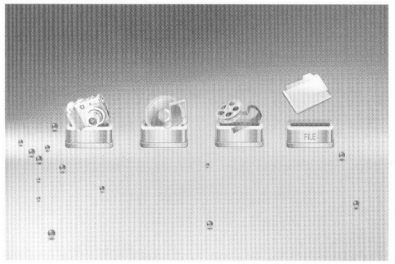

- A list of all movie files will be listed on the left side of the screen. The right side consists of the movie preview window and information display of the current movie. Use Up/Down arrows to select the movie and press Enter to play.

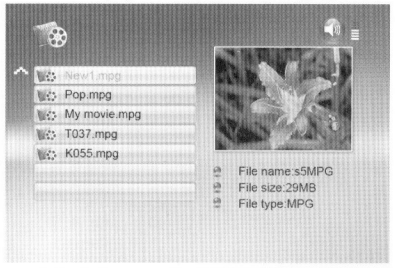

Once a movie is playing, press the ENTER button on the remote control. The following menu will appear:

A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to copy
Press the "Menu" button to go back to the main display
Choose the "EDIT" option from the main menu.
Select the desired flash media that you want to copy to (SD/xD/CF/MS/USB/ Internal Memory)
Press the "MENU" button to display the Copy and Delete menu. Select the Suitcase icon and your file(s) will be copied.
Delete:
Choose the "EDIT" option from the main menu.
Select the desired flash media that you want to delete from. (SD/xD/CF/MS/USB/ NAND Internal Memory)
A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to delete
Press the "MENU" button to display the Copy and Delete menu. Select the Garbage Can icon and your file(s) will be deleted

Using the SETUP option

The following options can be changed by using the "SETUP" option from the main menu:

Menu Function	Description
Language	Includes Simplified Chinese, English, German, French and Spanish
Picture set	Includes the speed of automatic slide show, picture play mode two items.
Startup Set	Includes Mode select, Picture, Music, Movie and Play list
Video set	Screen brightness, contrast and color setup
Default set	Recover the factory default setup

Language setup

You can change the default language used by the menu as follows:
Choose the "SETUP" option from the main menu.
Choose the "ABC" option.

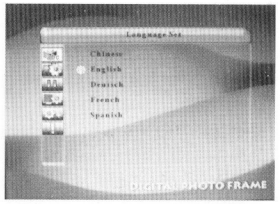

Use the up and down arrows to select your preferred language

Clock Set option

You can change the clock as follows:
Choose the "SETUP" option from the main menu.
Choose the "Clock Set" option.

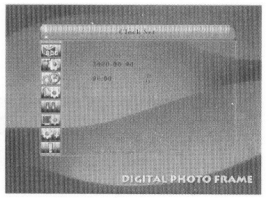

Use the right and left arrows to highlight the desired parameters and the up and down arrows to change the time/ date.
Press ENTER when finished

DIGITAL PICTURE FRAME

Previous

Play previous movie in the play list

Fast Forward

Play forward the movie by 2/3/4 times speed.

Play or Pause

Play or Pause the movie.

Fast Backward

Play backward the movie by 2/3/4 times speed.

Next

Play next movie in the play list

Stop

Stop the movie and return to the playlist

Zoom

Increase the size of the picture by 2/3/4/1 times.

DIGITAL PICTURE FRAME

Listening to MP3 music

Make sure you have at least one MP3 file on your memory card or your USB flash drive. When this is done:

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "MUSIC" option from the menu and press "ENTER"
- 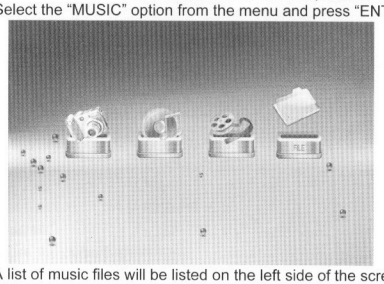

- A list of music files will be listed on the left side of the screen. The right side consists of the frequency chart and information status bar. The song information area is below the status bar. Use Up/Down arrows to select the music file and press Enter to play.

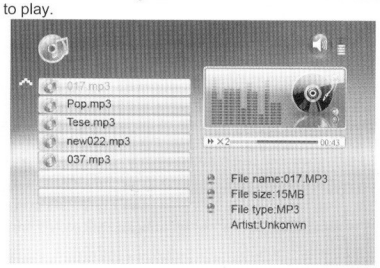

Alarm Set Option

Set the alarm for a specific time by:

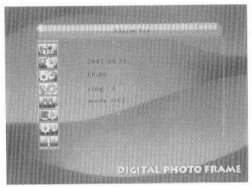

Choose the "SETUP" option from the main menu.
Choose the "Alarm Set" option
Use the right and left arrows to highlight the desired parameters and the up and down arrows to change the time/ date
Ensure that "mode" is turned to "ON"
Press ENTER when finished

Changing the slideshow speed

You can change the slideshow speed as follows:
Choose the "SETUP" option from the main menu.
Choose the "Slideshow Model" option.

Video setup

You can change some of the display parameters in order to improve the picture quality. Those parameters are: Brightness, Contrast and Color
Choose the "SETUP" option from the main menu.
Choose the "Video Set" option.
Select the parameter to change and press "Enter"

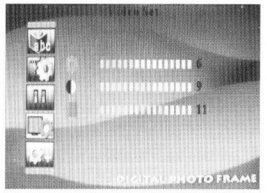

Use the right and left arrows to change the value

- ***Startup setup***

You can change the startup from main menu to slideshow or calendar as you like, choose the option, and then select what you like.

DIGITAL PICTURE FRAME

- Press VOL+ to increase the volume or VOL- to decrease the volume.
- Press Play/Pause button on remote control to play or pause the music file.
- Press Stop button on the remote control to return to the list of music files.

File Management

Playing a slideshow with music

Ensure you have at least one picture on your memory card or your USB flash drive. Additionally, you must have one MP3 file saved on the selected memory card/USB/Internal Memory. When this is done:

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "FILE" option from the menu and press "ENTER"
- 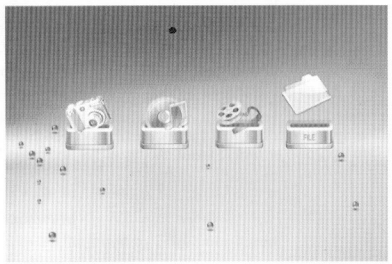

- A list of all files on the selected memory card or internal memory will be listed on the left side of the screen. The right side consists of the file information. Use Up/Down arrows to select a picture file and press Enter to enter a full screen photo (pause mode). Press Play button on the remote control, an audio slideshow will begin automatically.
- Once an audio-slideshow is playing, press the OSD button. The following menu will appear:

DIGITAL PICTURE FRAME

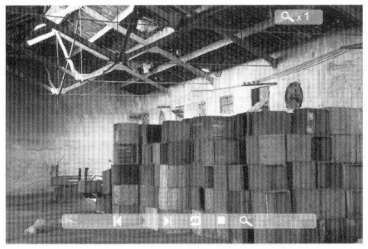

Previous
Play previous picture in the picture list

Play or Pause
Play or pause the current slideshow.

Next
Play next picture in the picture list

Rotate
Use the rotate function to change the picture orientation to either portrait or landscape.

Stop
Stop slideshow and return to photo thumbnail.

Zoom
Increase the size of the picture by 2/4/8/16/1 times.

VOL
Press VOL+ or VOL- on remote control to increase or decrease the volume

Copying and Deleting Files

To copy and delete files on your memory card, USB drive or internal memory.

Technical Support

Frequently asked questions

1) Q: Why do my photos take so long to load?
A: Generally the higher the resolution of the photo, the longer it will take to load. Resizing your photos to a lower resolution will quicken the processing time.
2) Q: How do I store music files?
A: First, use a personal computer and popular audio editing software to convert your music to MP3 format. The Digital Picture Frame will only play MP3 files so all Windows Media Player™ and/or iTunes™ files will have to be converted first. You can use a card reader or your digital camera to transfer those files to your memory card.
3) Q: How come the Digital Picture Frame does not show some of my photos?
A: The Digital Picture Frame is designed to show photos following the same camera industry standards format as digital cameras. This format is a JPEG format. Images, such as web images, scanned images, or photos in RAW format, are not stored according to camera industry standards and therefore cannot be displayed correctly on the Digital Picture Frame. Please use your PC applications to convert such images into standard JPEG format before viewing them on the Digital Picture Frame.
4) Q: If I keep showing the same photo for a long time, will it damage the LCD screen?
A: No. The Digital Picture Frame can display the same photo continuously for a long time. But it is recommended not to show the same picture continuously for more than 1 month.
5) Q: Why I can not show my video?
A: Please pay more attention about your video format, we can support most MP4 format and AVI format file.

Troubleshooting

Symptom	Cause	Corrective Actions
Digital Picture Frame doesn't power on	The POWER connector to the unit is not securely inserted.	Make sure you connect the AC adapter to the frame properly. When you connect the AC adapter to the frame and power up the unit, even without a memory card, you should see a blank screen. If you don't see the lit screen, check if the power is connected to the Digital Picture Frame and make sure it is securely attached.
No Start-up screen	Memory card is not inserted correctly.	Insert a supported memory card
No photo, videos or mp3 files on the memory card	Card is wrongly inserted	Verify if the way you inserted the card is correct. Make sure the front label of the memory card is facing AWAY from you. Do not force the memory card into the slot.
The File doesn't play	Incompatible File Format	Make sure there is at least one supported photo file on the memory card.
		Compatible Photo format: Compatible Photo format: JPEG
		Compatible Music format: MP3
		Compatible Video format: Motion JPEG/ DIVX/ XVID/ MS JPEG4 (AVI), MPEG1

DIGITAL PICTURE FRAME

Copy

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "FILE" option from the menu and press "ENTER"
- A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file. Repeat for all files that you want to copy
- Press the "Enter" button to display the Copy and Delete menu. Select Copy function and Enter.
- 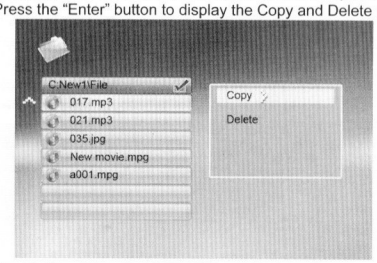

- Use Up/Down arrows to select the file destination folder. Press Right button to confirm.
- 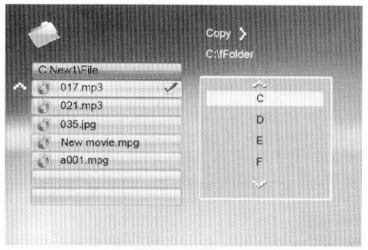

DIGITAL PICTURE FRAME

- Press Enter to start copying the file.

Delete

- Select the desired flash media on main menu. (SD/xD/CF/MS/USB/NAND-Internal Memory)
- Select the "FILE" option from the menu and press "ENTER"
- A list of available files will be displayed. Use the up and down arrows to highlight your required file and press the right arrow to highlight the desired file.
- Press the "Enter" button to display the Copy and Delete menu. Select Delete function and press Enter. File will be deleted.

Using the SETUP option

The following options can be changed by using the "SETUP" option from the main menu:

Function	Description
Language	Includes English, French, Spanish, Deutsch, Italian
Slideshow time	Slideshow duration: 3s/5s/15s/1mins/15mins/1hr
Slideshow mode	Off, Random, Fading, Bottom_to_top, Top_to_bottom, Left_to right, Right_to_left, Door_close, Door_open, Hori_cross, Verti_cross
Music Repeat Mode	Repeat one, Repeat all, Repeat off
Movie Repeat Mode	Repeat one, Repeat all, Repeat off
Display mode	Crop, Stretch, Cinema
Time	Year/Month/Date/Time setup
Alarm	Alarm Time/Alarm Music/Alarm On/off setup
Default	Recover the factory default setup

Calendar/Clock Display

Upon turning on the Digital Picture Frame, you will go straight to the MENU screen. If you select Calendar/Clock and press Enter, you will go to Calendar/Clock screen. If the Alarm is turned on, it will also show the alarm time. A picture slideshow will begin at the picture preview window at the right part of the screen.

Specifications

Type	Longshow Digital Picture Frame
Resolution	1024 x 768
Power Supply	12 V
Consumption	6 Watts
Working Temperature	-20 to +65 degrees
Luminosity	350cd/m^2 max.
Contrast	300:1
Viewing Angle	70/70/70/40 (CR=10)
Response Time	25ms
Display Mode	4:3
Photo Changing Interval	Fast, Slow, Normal
File Format	JPEG, MP3,MPEG1, AVI (JPEG Motion, DIVX/XVID/MS MPEG4)
Photo Size	12 Mega Pixels
Current	AC110---240V (50HZ---60HZ)
Cards	SD/MMC/MS/CF/XD/USB
USB ports	USB Host, USB Slave
Start-up	Slideshow/main menu/ calendar
Package Contents	Digital Picture Frame AC/DC Adapter User Guide Remote control USB Cable

Maintenance and Precaution

The Digital Picture Frame is for indoor use only.
To reduce the risk of fire or electric shock; do not expose this appliance to rain or moisture.
Do not block the ventilation holes on the back of the Digital Picture Frame at any time.
Keep your Digital Picture Frames out of sunlight. Direct sunlight may cause damage.
Do not open the case of the Digital Picture Frame. There is a risk of electric shock, and there are no user serviceable parts inside. Opening the case will void your warranty.
Do not use the Digital Picture Frame if conditions could allow condensation to occur, or damage may result.
Your Digital Picture Frame is a complicated electronic device and cannot withstand shock from drops.

Cleaning the LCD screen

Treat the screen gently. The screen on the Digital Picture Frame is made of glass and can be scratched or broken.
If fingerprints or dust make the LCD screen dirty, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
If you use an LCD Cleaning Kit sold on the market, apply the cleaning liquid to the cloth. Do not apply the liquid directly to your LCD screen.

DIGITAL PICTURE FRAME

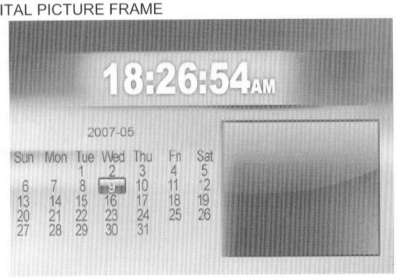

Technical Support

Frequently asked questions

1) Q: Can I use touch-enabled technology for my Digital Picture Frame?
A: The LCD screen does not support touch-enabled technology. Please use the buttons or remote control to control the Digital Picture Frame.

2) Q: If I keep showing the same photo for a long time, will it damage the LCD screen?
A: No. The Digital Picture Frame can display the same photo continuously for a long time. But it is recommended not to show the same picture continuously for more than 1 month.

3) Q: How do I store music files?
A: First, use a personal computer and popular audio editing software to convert your music to MP3 format. The Digital Picture Frame will only play MP3 files so all Windows Media Player™ and/or iTunes™ files will have to be converted first. You can use a card reader or your digital camera to transfer those files to your memory card.

4) Q: Does the Digital Picture Frame have built-in memory?
A: Yes.

5) Q: What is the maximum picture size?
A: The Digital Picture Frame is able to display pictures up to 12 Mega Pixels.

DIGITAL PICTURE FRAME

6) Q: What is the best picture resolution displayed on the screen?
A: The frame's best resolution is 1024x768.

7) Q: How come the Digital Picture Frame does not show some of my photos?
A: The Digital Picture Frame is designed to show photos following the same camera industry standards format as digital cameras. This format is a JPEG format. Images, such as web images, scanned images, or photos in RAW format, are not stored according to camera industry standards and therefore cannot be displayed correctly on the Digital Picture Frame. Please use your PC applications to convert such images into standard JPEG format before viewing them on the Digital Picture Frame.

Replacing the Remote Control Battery

1 — Remove the battery compartment cover by pulling the cover in the direction of the arrow.

2 — Remove the battery.

3 — Insert the replacement battery taking note of the correct polarity (+ -).

4 — Replace the cover.

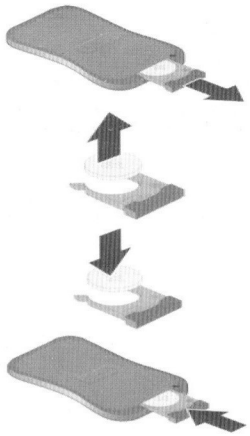

Caution:
1. Only use a 3V CR2025 battery.
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the FlashPlayer for prolonged periods.

Regulatory Compliance

CE Declaration of Conformity

Attestation RSH05080201-1, RSH06080201-2

We declare under our responsibility that the product is in conformity with the following standards

EN55022:1998 (Radio Disturbance requirement of Information Technology Equipment)
EN55024:1998 (Immunity requirement of Information Technology Equipment)
EN61000-3-2:2000 (Limits for Harmonic Current Emission)

As assessed by the following applications standards:

89/336/EEC Electromagnetic Compatibility

This Product is produced by a manufacturing organization on ISO9000 level.

Federal Communications Commission (FCC) Notice (U.S. and Canada Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy an not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interfere will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.
To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

Troubleshooting

ymptom	Cause	Corrective Actions
Digital Picture Frame doesn't power on.	The Power connector to the unit is not securely inserted.	Please be sure that the AC adaptor is properly connected to the frame.
Unable to insert memory card	Memory card inserted in the incorrect slot or in the incorrect direction.	Insert the correct card in the correct slot and direction.
Power is on but the Start-Up screen is not displayed.	System does not work normally	Restart the Digital Picture Frame.
No photo, videos, or music files on memory card.	Memory card is not inserted correctly.	Insert a supported memory card.
No sound from the speakers.	The volume may be in the lowest level; it may be in mute mode.	Confirm the volume is properly adjusted or press MUTE button to exit mute mode.
No background music when slideshow pictures	Background music is off	Press BACK MUSIC button or enter COMBO mode to slideshow pictures.
The files do not play.	Incompatible File Formats.	Make sure there is at least one supported file format on the memory card.
Can not copy or delete files.	The files or memory card are locked.	Unlock the files or memory card.
Remote control does not work.	No battery or weak battery in the remote control.	Insert or change the battery in the remote control.

Specifications

Type	Digital Picture Frame
Size	15inch
Resolution	1024x768
Alimentation	12 V
Consumption	6 Watts
Working Temperature	-20 to +65 degrees
Response Time	25ms
Display Mode	4:3
File Format	JPEG, MPEG1, MPEG2, MP3, MPEG4
Photo Size	12 Mega Pixels
Current	AC110—240V (50HZ—60HZ)
Cards	SD/MMC/MS/CF/XD/USB
USB ports	USB Host, USB Slave
Package Contents	Digital Picture Frame AC/DC Adapter User Guide Remote control USB Cable

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.
FCC Declaration of Conformity
Model Number: DPF0800AAN.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Commission Fédérale de la Communication (FCC Déclaration)

Cet équipement a été testé et déclaré conforme aux limites des appareils numériques de classe B, aux termes de l'article 15 des règles de la FCC. Ces limites sont conçues de façon à fournir une protection raisonnable contre les interférences nuisibles dans le cadre d'une installation résidentielle. Cet appareil produit, utilise et peut émettre des hyperfréquences qui, si l'appareil n'est pas installé et utilisé selon les consignes données, peuvent causer des interférences nuisibles aux communications radio. Cependant, rien ne peut garantir l'absence d'interférences dans le cadre d'une installation particulière. Si cet appareil est la cause d'interférences nuisibles pour la réception des signaux de radio ou de télévision, ce qui peut être décelé en fermant l'équipement, puis en le remettant en fonction, l'utilisateur pourrait essayer de corriger la situation en prenant les mesures suivantes:

Trade Name Model Number

FC Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

Réorienter ou déplacer l'antenne de réception.
Augmenter la distance entre l'équipement et le récepteur.
Brancher l'équipement sur un autre circuit que celui utilisé par le récepteur.
Demander l'aide du marchand ou d'un technicien chevronné en radio/télévision.
Toutes modifications n'ayant pas reçu l'approbation des services compétents en matière de conformité est susceptible d'interdire à l'utilisateur l'usage du présent équipement.
Les raccordements à cet appareil doivent être réalisés avec des câbles blindés à protections métalliques pour les connecteurs RFI/EMI afin de maintenir la conformité avec les Règlements et la Législation du FCC.
CET APPAREIL NUMERIQUE DE LA CLASSE B RESPECTE TOUTES LES EXIGENCES DU REGLEMENT SUR LE MATERIEL BROUILLEUR DU CANADA.

End-of-Life Disposal

Your new product contains materials that can be recycled and reused. Specialized companies can recycle your product in order to reuse components of the product and to minimize waste.
Please find out about the local regulations on how to dispose of your old unit from your local municipality.
(For Customers in Canada and U.S.A)
Dispose of in accordance to local state, provincial, municipal or federal regulations. For additional information on recycling in the U.S.A, contact www.eiae.org (Consumer Education Initiative)
Please find out about the local regulations on how to dispose of your old unit from your local municipality.

PIXIMODO, INC. LIMITED WARRANTY

Thank you for selecting a PixiModo product. We are committed to standing behind our products, with responsive service and a comprehensive warranty. The terms and conditions of our warranty are set forth below.

The PixiModo 90-Day Warranty
This limited warranty is extended to the original purchaser of PixiModo products. Your PixiModo product is warranted to be free from defects in manufacturing, materials and workmanship. This warranty is not transferable. If such a defect appears during the term of this warranty, PixiModo will, at its option, (a) repair the defective product, (b) replace the defective materials, or (c) refund your purchase price. You will be responsible for all shipping charges.

This limited warranty is valid for 90 days from the date your PixiModo product was originally purchased and is subject to the further conditions and exclusions set forth below. The warranty of replacement products furnished pursuant to this warranty will be limited to the remainder of the warranty period of the original product.

Conditions And Exclusions
There are certain conditions and applications over which PixiModo has no control. Defects or problems as a result of such conditions or applications are not the responsibility of PixiModo. They include:

- Normal wear and tear
- Misuse, modification or alteration
- Acts of God
- Improper installation
- Improper maintenance
- Commercial use
- Cosmetic damage

CLAIMS UNDER THIS LIMITED WARRANTY MUST BE MADE WITHIN 60 DAYS OF THE APPEARANCE OF A DEFECT.

Please see attached Limited Warranty Card for more informatio

YOUR EXCLUSIVE REMEDY WITH RESPECT TO ANY AND ALL LOSSES OR DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL BE AS SPEC FIED ABOVE. PIXIMODO SHALL IN NO EVENT BE LIABLE FOR ANY CONSE-QUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND, HOWEVER OCCASIONE WHETHER BY NEGLIGENCE OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THIS LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY GIVEN BY PIXI-MODO AND SUPERCEDES ANY PRIOR, CONTRARY, ADDITIONAL OR SUBSE-QUENT REPRESENTATIONS, WHETHER ORAL OR WRITTEN. PIXIMODO DISCLAIMS AND EXCLUDES TO THE GREATEST EXTENT ALLOWED BY LAW ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTIES OTHERWISE ARISING FROM COURSE OF DEALING, COURSE OF PERFOR-MANCE, OR USAGE OF TRADE. NO PERSON (INCLUDING ANY EMPLOYEE, AGENT OR REPRESENTATIVE) IS AUTHORIZED TO MAKE ANY REPRESENTA-TION OR WARRANTY CONCERNING THIS PRODUCT, EXCEPT TO REFER TO YOU TO THIS LIMITED WARRANTY. THIS WARRANTY IS NOT A WARRANTY OF FUTURE PERFORMANCE BUT ONLY A WARRANTY TO REPAIR, REPLACE O REFUND.

ALL LEGAL CLAIMS AND ACTIONS RELATING TO OR ARISING FROM THIS LIMITED WARRANTY OR YOUR PIXIMOTO PRODUCT MUST BE BROUGHT IN THE CITY, STATE OR FEDERAL COURTS LOCATED IN THE CITY OF NEW YOR NEW YORK.

AN ACTION FOR BREACH OF THIS LIMITED WARRANTY MUST BE COM-MENCED WITHIN ONE YEAR AFTER THE CAUSE OF ACTION ACCRUES OR IT BARRED.

DIGITAL PICTURE FRAME

Maintenance and Precaution

- The Digital Picture Frame is for indoor use only.
- To reduce the risk of fire or electric shock; do not expose this appliance to rain or moisture.
- Do not block the ventilation holes on the back of the Digital Picture Frame at any time.
- Keep your Digital Picture Frames out of sunlight. Direct sunlight may cause damage.
- Do not open the case of the Digital Picture Frame. There is a risk of electric shock, and there are no user serviceable parts inside. Opening the case will void your warranty.
- Do not use the Digital Picture Frame if conditions could allow condensation to occur, or damage may result.
- Your Digital Picture Frame is a complicated electronic device and cannot withstand shock from drops.

Cleaning the LCD screen

- Treat the screen gently. The screen on the Digital Picture Frame is made of glass and can be scratched or broken.
- If fingerprints or dust make the LCD screen dirty, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- If you use an LCD Cleaning Kit sold on the market, apply the cleaning liquid to the cloth. Do not apply the liquid directly to your LCD screen.

Thank you very much!